


# THE SHARPER IMAGE®

## Emergency Radio & Spotlight

YW631 Instructions

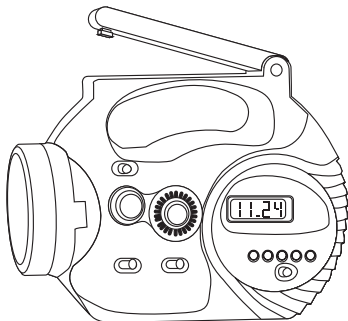

**Read and save these instructions.**

*Dear Sharper Image Customer,*

*Thank you for your purchase of a Sharper Image product. We appreciate your business very much.*

*Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.*

*For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life easier and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.*

*Enjoy your purchase!*

*Respectfully,*

A handwritten signature in black ink that reads "Richard". The script is fluid and cursive, with a small dot above the 'i'.


*Richard Thalheimer*

*Founder, Chairman and Chief Executive Officer*

*Call 1-800-344-4444 for 24-7 ordering and customer service,  
or go to **www.sharperimage.com**, our complete online store.*

## Caution

- Do not open the unit or take it apart. It contains no user-serviceable parts.
- Do not expose the unit to rain, high temperatures or other harsh environments.
- Disconnect power and remove battery before cleaning. Wipe the unit with a damp cloth. Do not use detergents or organic solvents. These may damage materials.
- For internal battery power, use AA NiCad rechargeable batteries only. Serious damage may result if non-NiCad rechargeable batteries are used.
- If the unit will not be used, remove the batteries.

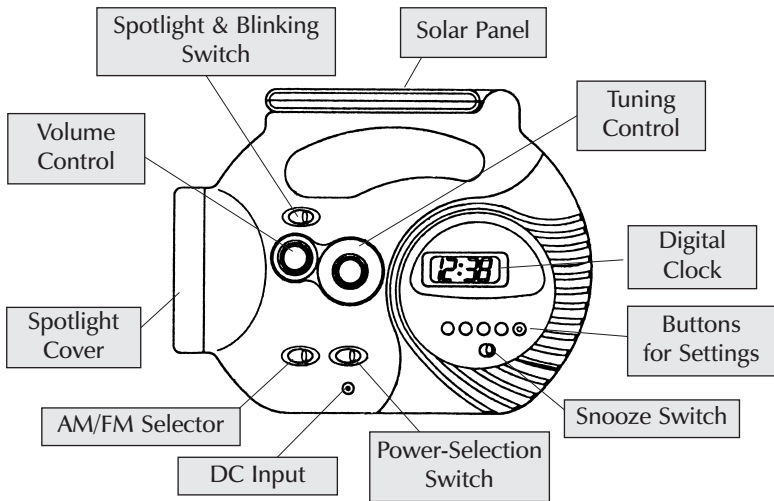

Because of continuing improvements, actual product may differ slightly from picture.

## Important

- Before using the Emergency Radio & Spotlight for the first time, charge the NiCad batteries with the included car adapter for five hours. Insert the appropriate end of the adapter into the DC input jack on the front of the unit. Plug the other end into your vehicle's power socket.
- You can also charge the unit for five hours using an AC adapter (not included) with centered positive output 5.5V DC 600 mA.
- Never leave depleted batteries in the lantern.
- Recharge immediately after batteries have become depleted as well as every three months, even if the unit has not been used.

## Installing Batteries

1. Slide the battery case lid open at the rear side of the unit.
2. Insert two 1.5V AA batteries (purchase separately) into the battery compartment. Make sure the +/- polarities are correctly positioned, as indicated on the case.
3. Slide the inner battery case lid open.
4. Insert one 1.5V AA battery (purchase separately) in the inner single compartment in order to operate the clock.

## Installing Batteries

5. Slide the battery case lids closed.
6. To replace rechargeable batteries, remove battery case lid and unscrew battery compartment cover underneath. Remove and replace with new batteries.

## Recharging Spotlight, Blinking Light, Emergency Siren with Blinking Light and Radio

### *Solar Cell Collection Panel*

Position the built-in, pivoting solar cell collection panels toward the sun to recharge the two included NiCad AA batteries.

#### *Spotlight:*

Charge Time	Service Time
40 hours	1 hour
20 hours	30 minutes
10 hours	15 minutes
5 hours	7½ minutes
2½ hours	approx. 4 minutes

## Recharging Spotlight, Blinking Light, Emergency Siren with Blinking Light and Radio

### *Blinking Light:*

---

Charge Time	Service Time
40 hours	2 $\frac{1}{2}$ hours
20 hours	1 $\frac{1}{4}$ hours
10 hours	37 $\frac{1}{2}$ minutes
5 hours	approx. 19 minutes
2 $\frac{1}{2}$ hours	approx. 10 minutes

### *Emergency Siren with Blinking Light:*

---

Charge Time	Service Time
40 hours	1 $\frac{1}{2}$ hours
20 hours	45 minutes
10 hours	22 $\frac{1}{2}$ minutes
5 hours	approx. 11 minutes
2 $\frac{1}{2}$ hours	approx. 6 minutes

---

## Recharging Spotlight, Blinking Light, Emergency Siren with Blinking Light and Radio

*Radio: (The time will vary depending on the volume of the radio.)*

Charge Time	Service Time
40 hours	6 hours
20 hours	3 hours
10 hours	1½ hours
5 hours	45 minutes
2½ hours	approx. 23 minutes

### ***Hand Crank***

Turn the built-in hand crank located on the back of the unit to recharge the two included NiCad AA batteries.

*Spotlight:*

Charge Time	Service Time
3 hours	1 hour
1½ hours	30 minutes
45 minutes	15 minutes
approx. 23 minutes	7½ minutes



## Recharging Spotlight, Blinking Light, Emergency Siren with Blinking Light and Radio

### *Blinking Light:*

Charge Time	Service Time
3 hours	2 <sup>1</sup> / <sub>2</sub> hours
1 <sup>1</sup> / <sub>2</sub> hours	1 <sup>1</sup> / <sub>4</sub> hours
45 minutes	approx. 38 minutes
approx. 23 minutes	approx. 19 minutes

### *Emergency Siren with Blinking Light:*

Charge Time	Service Time
3 hours	1 <sup>1</sup> / <sub>2</sub> hours
1 <sup>1</sup> / <sub>2</sub> hours	45 minutes
45 minutes	approx. 23 minutes
approx. 23 minutes	approx. 11 minutes

### *Radio: (The time will vary depending on the volume of the radio.)*

Charge Time	Service Time
30 minutes	1 hour
15 minutes	30 minutes
5 minutes	10 minutes
2 <sup>1</sup> / <sub>2</sub> minutes	5 minutes

## Operating the Spotlight, Blinking Light and Emergency Siren with Blinking Light

1. To turn on the spotlight, slide the **SPOTLIGHT/BLINKER** switch to “**Ⓓ**” position.
2. To turn on the blinker, slide the **SPOTLIGHT/BLINKER** switch to “**(•)**” position.
3. To activate the siren, slide the **SPOTLIGHT/BLINKER** switch to “**(•)**” position, then turn on the radio **VOLUME** button.

## Replacing the Spotlight

1. Turn the spotlight cover counterclockwise and lift.
2. Twist the inside bulb socket counterclockwise to unlock. Lift out the socket and remove the old bulb.
3. Insert a new bulb into the socket and replace the socket. Twist to secure.
4. Replace the spotlight cover and turn it clockwise until it is secure.

## Operating the Radio

The frequency range is 525 - 1705 kHz for AM; 88V - 108 MHz for FM.

1. To listen to the radio, set the **BAND SELECTOR** to AM or FM.
2. Turn the **VOLUME** control clockwise to turn on and to select the desired level.
3. To select a station, rotate the **TUNING** control.
4. To turn off the radio, turn the **VOLUME** control counterclockwise until you hear a clicking sound.

## Clock

**Note:** Insert one 1.5V AA battery in the inner single compartment in order to operate the clock. The clock does not operate using the two included NiCad AA batteries.

### *Setting the Time*

Hold the **SET** button down and press the **HR** or **MIN** button to set the hour and minute.

### *Setting the Alarm Time*

Hold the **AL.SET** button down and press the **HR** or **MIN** button to set the hour and minute.

# Clock

## *Waking Up to the Alarm*

1. Set the desired alarm time as described above.
2. Set the alarm mode to the **ON** position. Alarm activates when the alarm time has been reached and stops after one minute.
3. To stop the alarm, press the **SNOOZE** button or set the alarm mode switch to the **OFF** position.
4. To snooze, set the **ALARM MODE** switch to the **SNOOZE** position. Alarm activates when the alarm time has been reached and stops after one minute.
5. To stop alarm, switch to the **OFF** position. To snooze, press the **SNOOZE** button and the alarm activates again after four minutes.

# WARRANTY

## What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

## How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

## What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

## What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

## How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

**T.S.I. - Returns Department**  
**2901-A West 60th Street**  
**Little Rock, AR 72209**

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at [care@sharperimage.com](mailto:care@sharperimage.com).

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Sharper Image Corporation  
650 Davis St., San Francisco, CA 94111  
(415) 445-6000

Shop online: **[www.sharperimage.com](http://www.sharperimage.com)**

Due to continuing improvements, actual product may differ slightly from the product described herein.

V2 06/02